


USER'S GUIDE FOR THE SLAVE SENSOR

Slave Sensor:

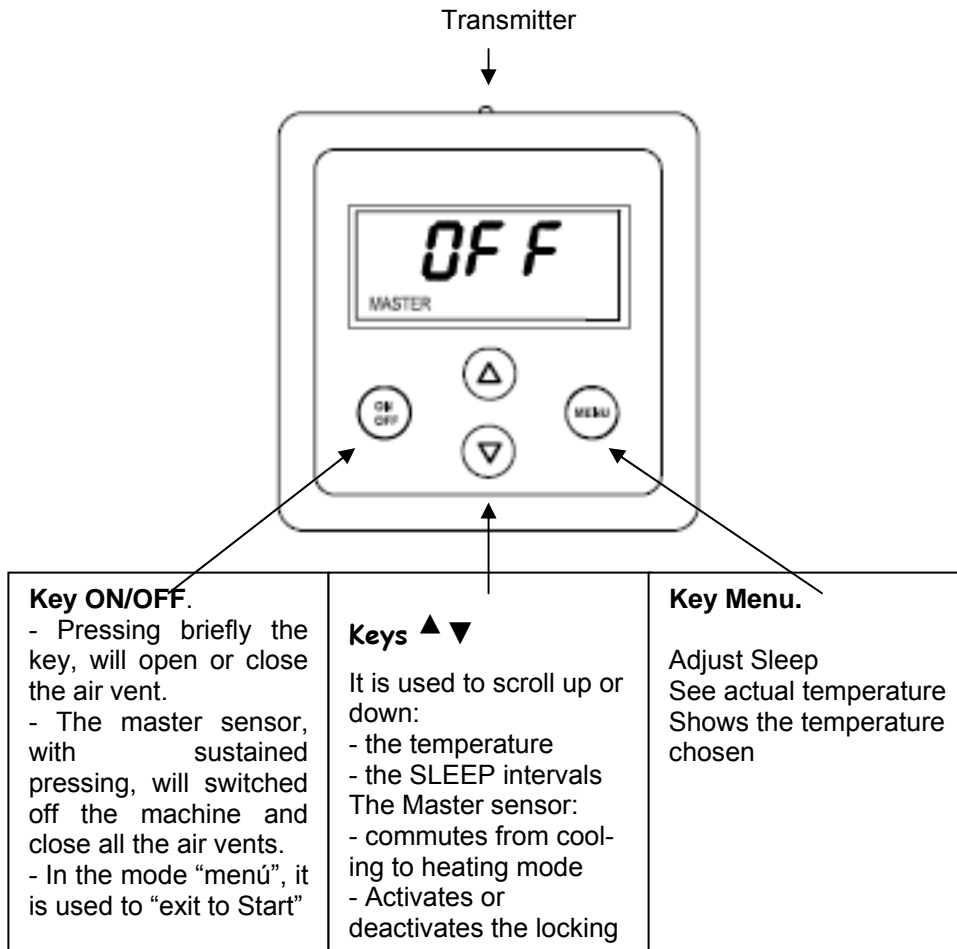

Mando/Sensor Esclavo.

Closing the Air Vent of the Master Sensor:

With the equipment switched on, and the air vent open, press briefly the key On/Off. The display will show OFF.

Opening the Air Vent:

With the equipment switched on, and the air vent closed, press the key On/Off. The air vent will open if the chosen and the actual temperatures are coherent.

Adjusting the temperature:

Press any of the central keys ▼▲ to select the chosen temperature for the room.

Adjusting the mode SLEEP:

Press the key Menu three times, the display will show SLP, and then pressing the central key ▲ to select the time. The time chosen will determine when the air vent will close until a new command. The selected intervals are: 30min. ; 1 Hour; 1:30 Hours; 2 Hours ; 3 Hours and 4 hours. Press the key On/Off to exit Menu.

To deactivate the mode SLEEP, follow the same procedure and chose time "0" .